 
 


# Goodmans

GPS190

Portable CD Radio player with iPhone/iPod docking

User Guide

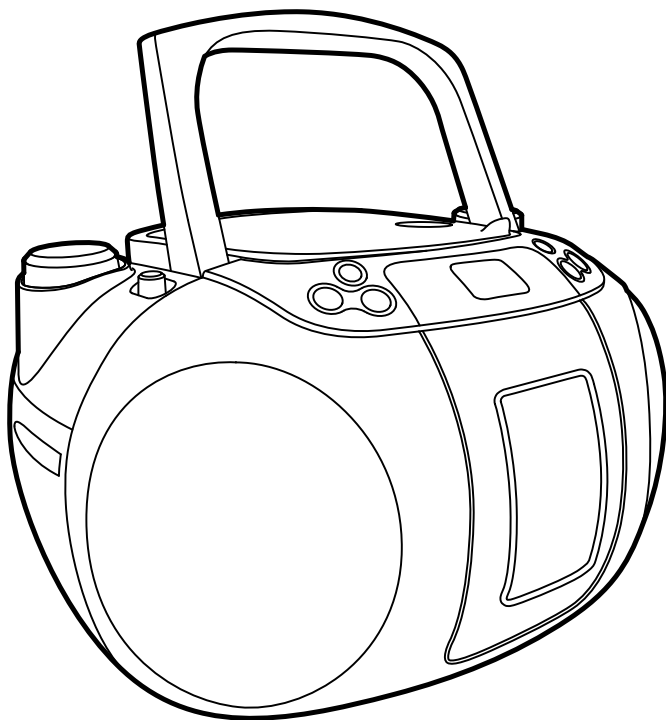

**IMPORTANT:** Please read all instructions carefully before use and keep for future reference

## Introduction

**Thank you for choosing this Goodmans Portable CD Radio Player with iPhone/iPod Docking.**

 
**You can listen to your favourite radio stations, CDs and iPhone/iPod.**

For the purpose of ease of use, the Goodmans Portable CD Radio Player with iPhone/iPod Docking will be referred to as the Portable System.

### **Safety is important**

Use of any electrical equipment should be undertaken with care. Please read the safety section on page 15 and 16 before using your portable System. This appliance is for household use only.


## What's in the box

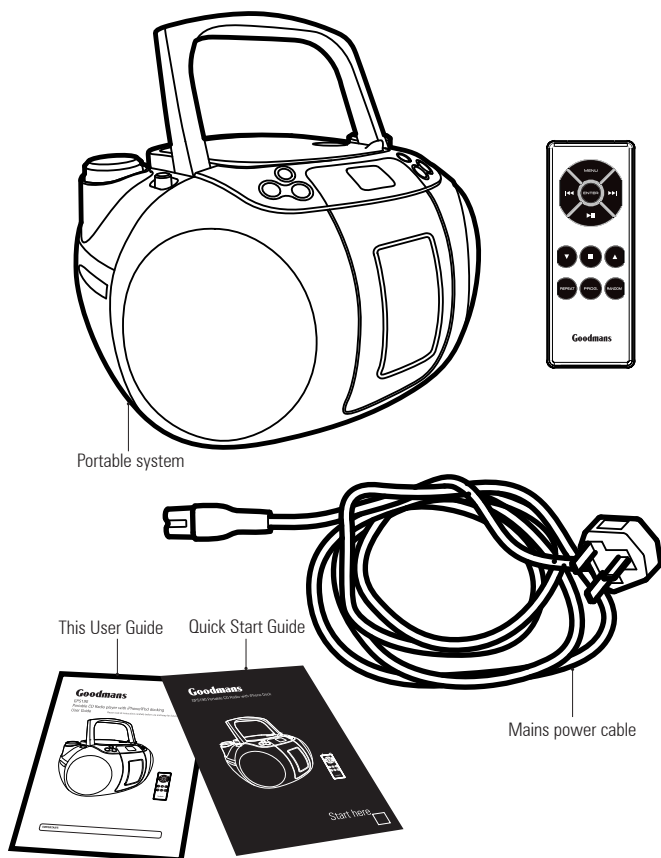


## Contents

<b>01</b> Your Portable System .....	4	<b>05</b> Help and Advice .....	12
<b>02</b> Getting Started.....	6	<b>06</b> Specification/Guarantee .....	14
<b>03</b> Daily use .....	8	<b>07</b> Warnings.....	15
<b>04</b> iPod/iPhone .....	10	<b>08</b> Electrical Information.....	16

 
## Top

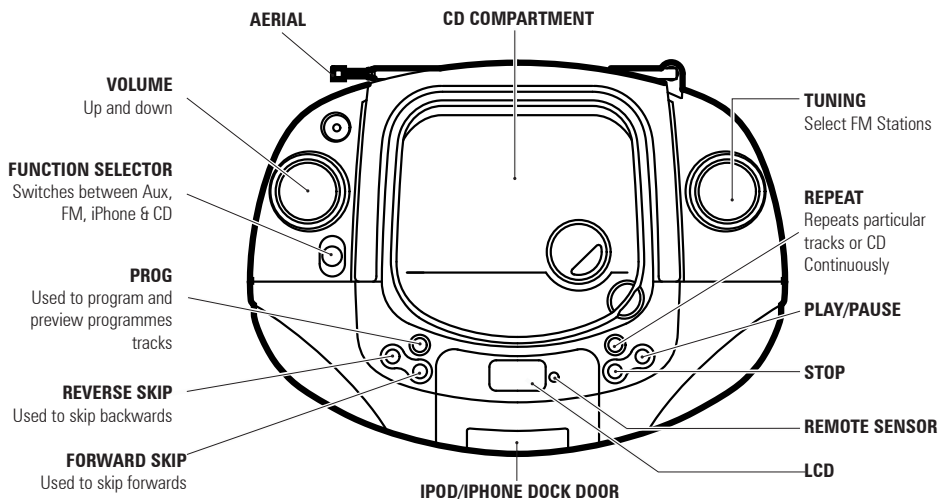

## Rear

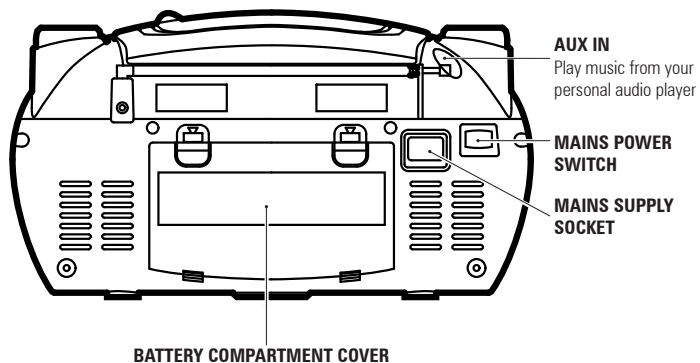 

## REMOTE CONTROL

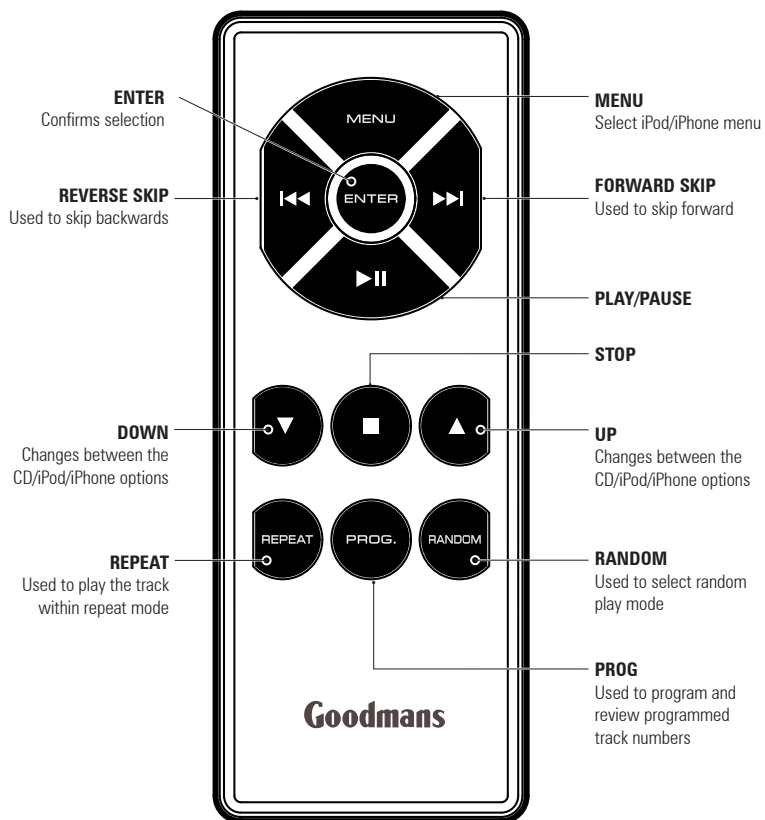 


## 02 Getting started

1

### AC Power Connection

 
Plug the power cable into the AC input socket at the rear of the portable system.

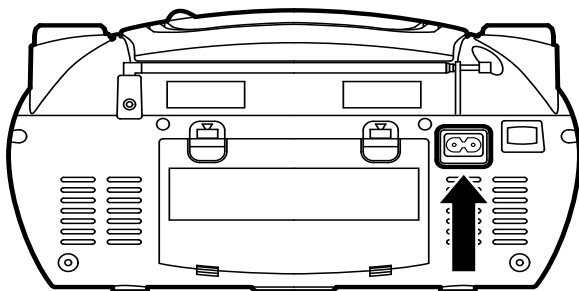

2

### AC Power Connection

 Connect the mains plug to the power socket and turn the power on.

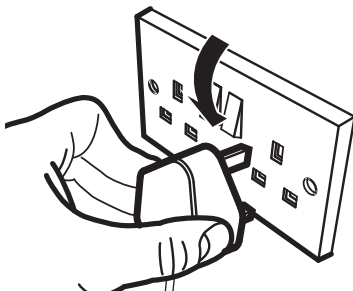


3

## Using the Remote Control

Open the battery cover of the Remote Control and insert the battery (supplied) so that the '+' mark on the battery match the '+' mark inside the remote control. Replace the battery cover.

To use the Remote Control, simply direct it towards the front of the Portable System and press the desired buttons.


**DON'T FORGET!** When replacing the batteries make sure that you use the same size and type.

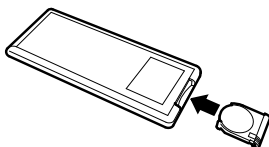

4

## Using the Portable System with Batteries

Remove the battery compartment cover from the portable system and insert eight D size batteries (not supplied) following the polarity diagram, replace the battery compartment cover.

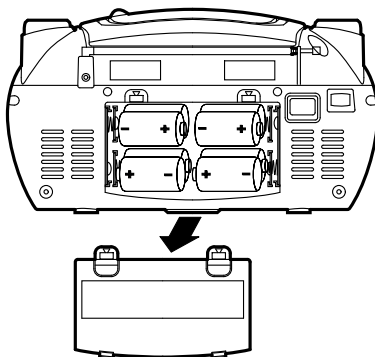


## 03 Daily use

We have divided this user guide into separate sections, so that you can find the information you are looking for easily. This section covers the day to day functions that you will use most.

### Radio

- 1 Raise and pull open the Antenna.
- 2 Slide the **FUNCTION** selector to **FM**.
- 3 Rotate the **TUNING** knob to find the station you want.

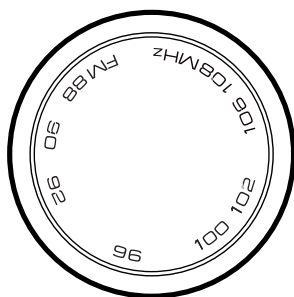

### CD Player

You can play audio, CD-R, CD-RW and CD Rewritable discs.

**DON'T FORGET!** You will not be able to play CD-ROM, CDI, VCD, DVD or computer discs.

#### Loading a CD

- 1 Slide the **FUNCTION** selector to **CD**, **CD** is displayed in the **LCD** display.
- 2 Open the CD compartment lid, place the CD with the label side facing upwards and then close the CD compartment lid.

#### Play a CD

- 1 Press **PLAY/PAUSE** ►| button to start playing a CD.
- 2 Press **PLAY/PAUSE** ►| button to pause a CD, press the **PLAY/PAUSE** ►| button to start playing the CD again.
- 3 Press **STOP** ■ button to stop playing the CD.

### Skipping Forward or backwards through CD

You can skip forwards or backwards through the CD to select a particular track using the **FORWARD SKIP** ►► and **REVERSE SKIP** ◄◄ buttons.

### Repeating Current track on CD

You can repeat the current track or CD continuously.

- 1 Repeat current track:

Press the **REPEAT** button once to repeat the current track continuously, Repeat 1 displays in the **LCD** display.

- 2 Repeat CD:

Press the **REPEAT** button twice to repeat the entire CD continuously, **REPEAT** all displays in the LCD display.

### Cancelling the Repeat option

You can cancel the repeat option at any time.

Press the **REPEAT** button again.

### Programmed Track Selection

You can set the CD player to play a selection of tracks from the CD.

**DON'T FORGET!** You can store any track more than once, the maximum number of tracks that can be stored is 20.

- 1 Make sure the portable system is not operating.
- 2 Press the **PROG** button, the **LCD** display flashes **PROG** and the number of tracks available for selection is displayed.
- 3 Use the **FORWARD SKIP** ►► and **REVERSE SKIP** ◄◄ buttons to skip forwards and backwards to find the track you are looking for.
- 4 Press the **PROG** button to store the selected track.

### Playing the programmed selection

Press the **PLAY/PAUSE** ►| button to play your selection.



**Reviewing your programmed selection**

- 1 You can review the tracks in your selection.
- 2 When the CD is not in operation, press the **FORWARD SKIP** ►► and **REVERSE SKIP** ◀◀ buttons to view your selection shown in the **LCD** display.

**Deleting a selection**


You can delete a selection, press the **STOP** ■ button twice, open the CD compartment or slide the **FUNCTION** selector to another function.

**DON'T FORGET!** The use of this device with an iPhone may affect its wireless performance.

**AUX IN**

You can play the music from your personal audio player.

- 1 Slide the **FUNCTION** selector to **AUX**.
- 2 Connect your personal audio player to the **AUX IN** socket (cable not supplied).

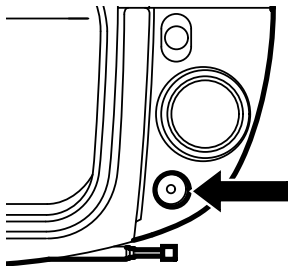

- 3 Switch on and select play on your audio player.
- 4 Use the volume knob to set the volume, or you can change the volume by using the volume control on your personal audio player.

The portable system will operate with the following iPod/iPhone models.

Model	Generation	Capacity
iPod touch	1 <sup>st</sup>	8, 16 & 32 GB
iPod touch	2 <sup>nd</sup>	8, 16 & 32 GB
iPod touch	3 <sup>rd</sup>	32* & 64 GB
iPod touch	4 <sup>th</sup>	8, 32 & 64 GB
iPod Classic	2 <sup>nd</sup> (aluminium)	4 & 8 GB
iPod Classic		80 GB
iPod Classic		160 GB (2007)
iPod Classic		120 * 160 GB (2009)
iPod nano	1 <sup>st</sup>	1, 2 & 4 GB
iPod nano	2 <sup>nd</sup> (aluminium)	2, 4 & 8 GB
iPod nano	3 <sup>rd</sup> (video)	4 & 8 GB
iPod nano	4 <sup>th</sup> (video)	8 & 16 GB
iPod nano	5 <sup>th</sup> (video camera)	8 & 16 GB
iPod nano	6 <sup>th</sup>	8 & 16 GB
iPod	5 <sup>th</sup> (video)	30 GB
iPod	5 <sup>th</sup> (video)	60 & 80 GB
iPhone		4, 8 & 16 GB
iPhone 3G		8 & 16 GB
iPhone 3GS		8, 16 & 32 GB
iPhone 4		16 & 32 GB

### iPod/iPhone Operation

- 1 To open the iPod/iPhone dock door, press **PUSH OPEN** on the top right hand side.



- 2 Carefully align and gently insert your iPod/iPhone into the dock compartment until it connects firmly with the connector located at the bottom of the dock compartment.
- 3 Close the iPod/iPhone dock door.

**DON'T FORGET!** The iPod/iPhone will be charged when the portable system is powered on. It will stop charging if the AC power is disconnected.

**DON'T FORGET!** iPod/iPhone will not be charged when the portable system is being powered on batteries.

Slide the **FUNCTION** selector to iPhone/, IP is shown in the LCD display.

Press the **PLAY/PAUSE ►||** button to play the music from your iPod/iPhone.

Press the **PLAY/PAUSE ►||** button to pause your iPod/iPhone.

Press the **PLAY/PAUSE ►||** button to restart your iPod/iPhone.

Use the **FORWARD SKIP ►►** or **REVERSE SKIP ◀◀** buttons to skip through the tracks on your iPod/iPhone.

## 05 Help and Advice

If a fault occurs, first check the points listed below before taking the portable system for repair. Do not open the portable system as there is a risk of electric shock.

If you are unable to rectify a problem by following these hints, consult your dealer or service centre.

**WARNING:** Under no circumstances should you try to repair the portable system yourself, as this will invalidate the warranty.

Problem	What to do
Portable system does not respond (no power).	Check the mains power cable and make sure it is plugged into a suitable power outlet. Check that the mains power supply is switched on. Connect the power to a different power outlet.
Noise or sound distorted on FM broadcast.	Retune the FM broadcast station. Fully extend the FM telescopic antenna.
FM no sound.	Slide the <b>FUNCTION</b> selector to FM. Increase the volume.
iPod/iPhone does not respond with the Portable System.	Remove your iPod/iPhone from the dock and check for any obstruction on the connectors in the dock and on your iPod/iPhone, then reseat it in the dock.
	Make sure that your iPod/iPhone is working properly before docking into the Portable System. Refer to your iPod/iPhone manual for info on resetting the iPod/iPhone.
	Make sure the FUNCTION selector is set to iPhone.
iPod/iPhone does not charge.	Remove your iPod/iPhone from the dock and check for obstruction on the connectors in the dock and on your iPod/iPhone. Then reseat it in the dock.
	If you are running the portable system using batteries, change to AC power.
	Please make sure your iPod/iPhone is working properly before docking into the unit. Please refer to your iPod/iPhone manual for details on resetting
CD player will not play.	Slide the FUNCTION selector to CD. Insert CD with label side up.
CD skips while playing.	Wipe CD with clean cloth or use another disc.
Intermittent sound from CD Player.	Clean or replace the defective disc. Use a CD-lens cleaning disc to clean the lens. Relocate the player away from shock or vibration.
Remote control no functions or short range.	Insert new battery. Aim remote directly towards the remote sensor.
Portable System gets warm after extended play at high volume.	Turn the Portable System off a period of time or lower volume.

### Maintenance & safety

### Precautions & General Maintenance

- Place the Portable System on a hard and flat surface so that the system does not tilt.
- Do not expose the Portable System, batteries or CDs to humidity, rain, sand or excessive heat caused by heating equipment or direct sunlight.
- Do not cover the Portable System. Adequate ventilation with a minimum gap of 6 inches between the Ventilation holes and surrounding surfaces is necessary to prevent heat build up.
- The mechanical parts of the Portable System contain self-lubricating bearings and must not be oiled to lubricate.
- To clean the Portable System, use a soft dry cloth. Do not use any cleaning agents containing alcohol, ammonia, benzene or abrasives as these may harm the housing.

### CD Player and CD Handling

- The lens of the CD player should never be touched!
- Sudden changes in the surround temperature can cause condensation to form and the Lens of your CD player to cloud over. Playing a CD is then not possible. Do not attempt clean the lens but leave the portable system in a warm environment until the moisture evaporates.
- Always close the CD lid to keep the CD compartment dust to clean, dust the compartment with a soft dry cloth.
- To clean the CD, wipe in a straight line from the centre towards the edge using a soft, lint free cloth.  
Do not use cleaning agents as they may damage the disc.
- Never write on a CD or attach any stickers to it.

TECHNICAL SPECIFICATION	
<b>Power Supply</b>	• AC 230 V, 50 Hz.
<b>Power Consumption</b>	• 18 watts.
<b>Dimensions of Unit</b>	• 295 (W) *175 (H) *220 (L) mm.
<b>Frequency Range</b>	• FM 88-108 MHz.
<b>Antenna</b>	• FM-Telescopic Antenna.
<b>CD Section</b>	• Top Loading Player.
<b>CD Size</b>	• 5" & 3" Compatible.
<b>AUX IN Jack</b>	• 3.5 mm.

## Guarantee

The Portable System is guaranteed for twelve months from the date of original purchase. If any defect due to faulty materials or workmanship, contact the Goodmans Helpline. Have your receipt of purchase on hand.

The guarantee is subject to the following provisions:

- It is only valid within the boundaries of the country of purchase.
- The product must be correctly installed and operated in accordance with the instructions contained in this User Guide.
- The Portable System must be used solely for domestic purposes.
- The guarantee will be rendered invalid if the Portable System is re-sold or has been damaged by inexpert repair.
- The manufacturer disclaims any liability for incidental or consequential damages.
- The guarantee is in addition to, and does not diminish, your statutory or legal rights.



## WEEE

This appliance is labelled in accordance with European Directive 2002/96/EG concerning used electrical and electronic appliances (Waste Electrical and Electronic Equipment - WEEE). The guideline determines the framework for the return and recycling of used appliances.

## Sound levels

Your hearing is very important to you and to us, so please take care when using this Portable System. It is strongly recommended that you follow the listed guidelines in order to prevent possible damage or loss of hearing.

### Establish a safe sound level

Over time your hearing will adapt to continuous loud sounds and will give the impression that the volume has in fact been reduced. What seems normal to you may in fact be harmful. To guard against this **before your hearing adapts**, set the volume to a low level.

Slowly increase the level until you can hear comfortably and clearly and without distortion. Damage to your hearing is accumulative and is irreversible. Any ringing or discomfort in the ears indicates that the volume is too loud.

Once you have established a comfortable listening level, **do not increase the sound level**.

## General Safety

This Portable System has been designed and manufactured to meet European safety standards, but like any electrical equipment, care must be taken if you are to obtain the best results and safety is to be assured.

Do read these operating instructions before you attempt to use the Portable System.

Do ensure that all electrical connections (including the mains plug, extension leads and interconnections between pieces of equipment) are properly made in accordance with the manufacturer's instructions.

Switch off and remove the mains plug when making or changing any connections.

Do consult your dealer if you are ever in doubt about the operation or safety of your Portable System.

Don't continue to operate the Portable System if you are ever in doubt about it working normally, or if it is damaged in any way. Switch it off withdraw the plug from the mains and consult your dealer.

Don't remove any fixed covers as this may expose you to dangerous voltages.

Don't leave the Portable System switched On when it is unattended for long periods of time, unless it is specifically stated that it is designed for unattended operation or has a standby mode.

Make sure that other people in your household are conversant with the Portable System.

Don't obstruct the ventilation vents on the Portable System, for example with curtains or soft furnishings.

Overheating will cause damage and shorten the life of the product.

Don't allow electrical equipment to be exposed to rain or moisture.

Store the Portable System in a clean, dry environment.

Do not use any cleaning solutions on the Portable System.

### Electrical Information

This Portable System is fitted with a BS1363/A 13 amp plug. If it is not suitable for your supply sockets it must be removed and replaced with an appropriate plug. If the plug becomes damaged and/or needs to be replaced please follow the wiring instructions below. The plug removed must be disposed of immediately. It must not be plugged into a supply socket as this will be an electrical hazard. If the fuse needs to be replaced it must be of the same rating and ASTA approved to BS1362. If the plug is changed, a fuse of the appropriate rating must be fitted in the plug, adapter or at the distribution board. If the fuse in a moulded plug is replaced, the fuse cover must be refitted before the appliance can be used.

### Wiring Instructions

The supply cable will be either 2-core or 3-core. Follow the appropriate wiring instructions given below. In both cases ensure that the outer sheath of the cable is firmly held by the cable clamp.

#### 2-Core Plug


**WARNING!** Do not connect either wire to the earth terminal.



This symbol indicates that this 2-core appliance is Class II and does not require an earth connection.


The wire coloured blue must be connected to the terminal marked with the letter N or coloured black.

The wire coloured red must be connected to the terminal marked with the letter L or coloured red.

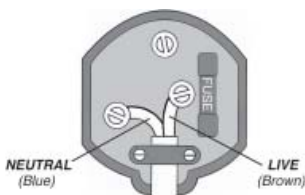


#### 3-Core Plug

**WARNING!** This appliance must be earthed.

The wire coloured green and yellow must be connected to the terminal marked with the letter E, or by the earth symbol , or coloured green and yellow.

The wire coloured blue must be connected to the terminal marked with the letter N or coloured black.

The wire coloured red must be connected to the terminal marked with the letter L or coloured red.

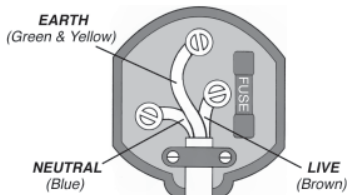









**Goodmans**

Technical Support: 0871 230 1777

DCS-NOV11-GPS190